

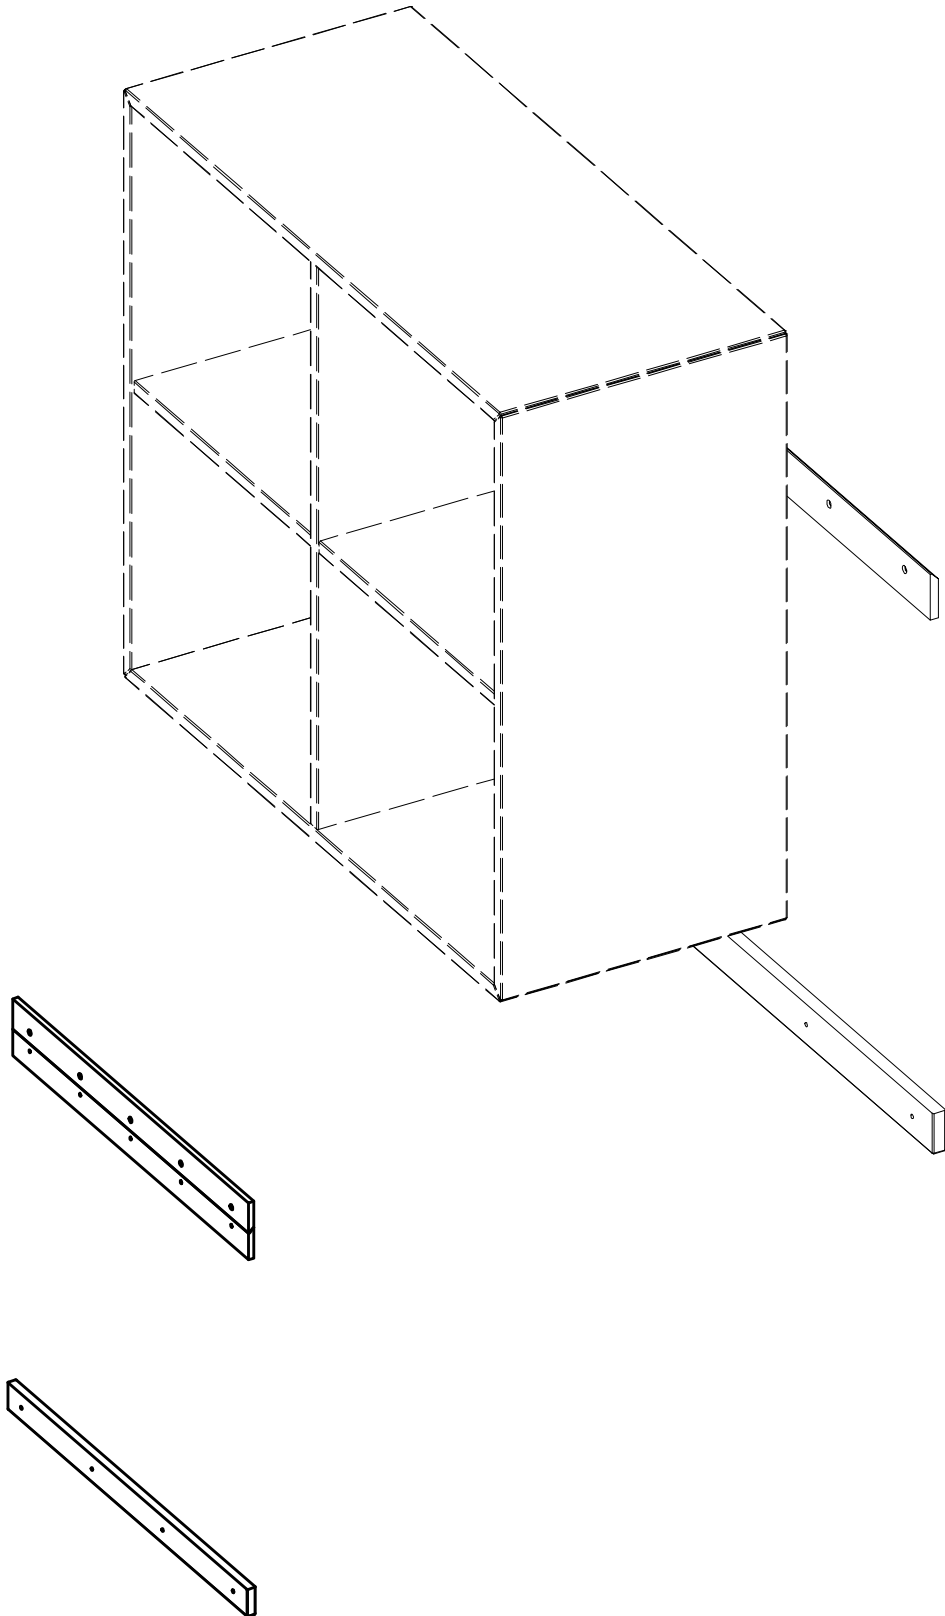
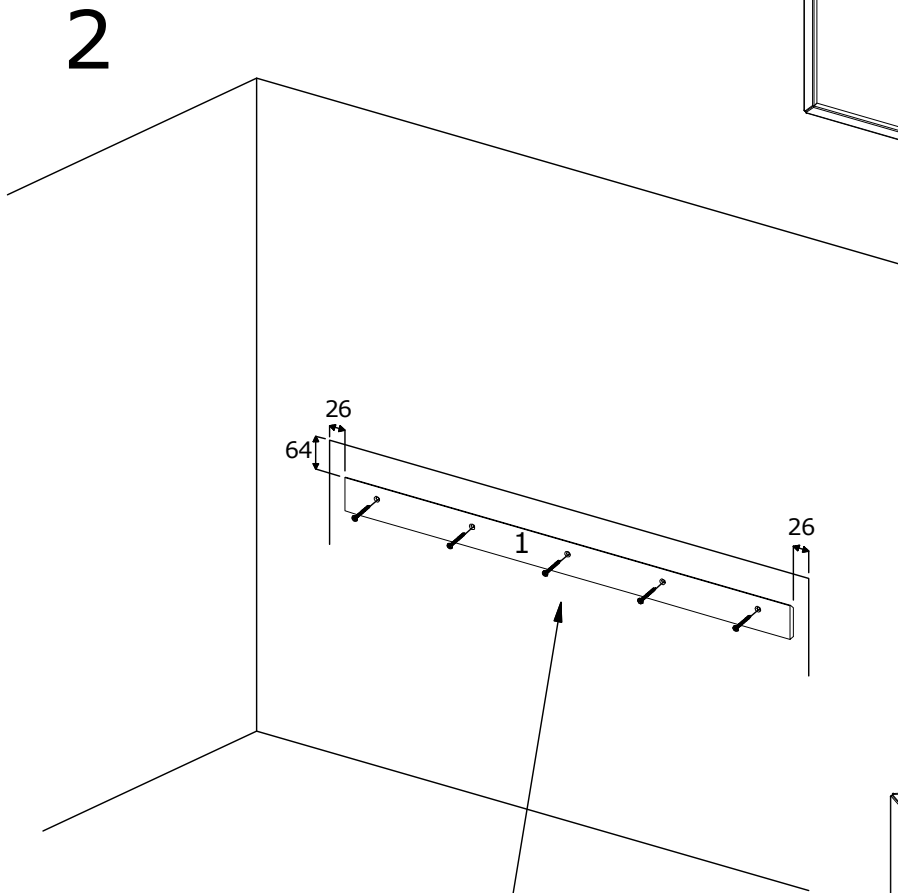


# 2828 - 2830 - 2831

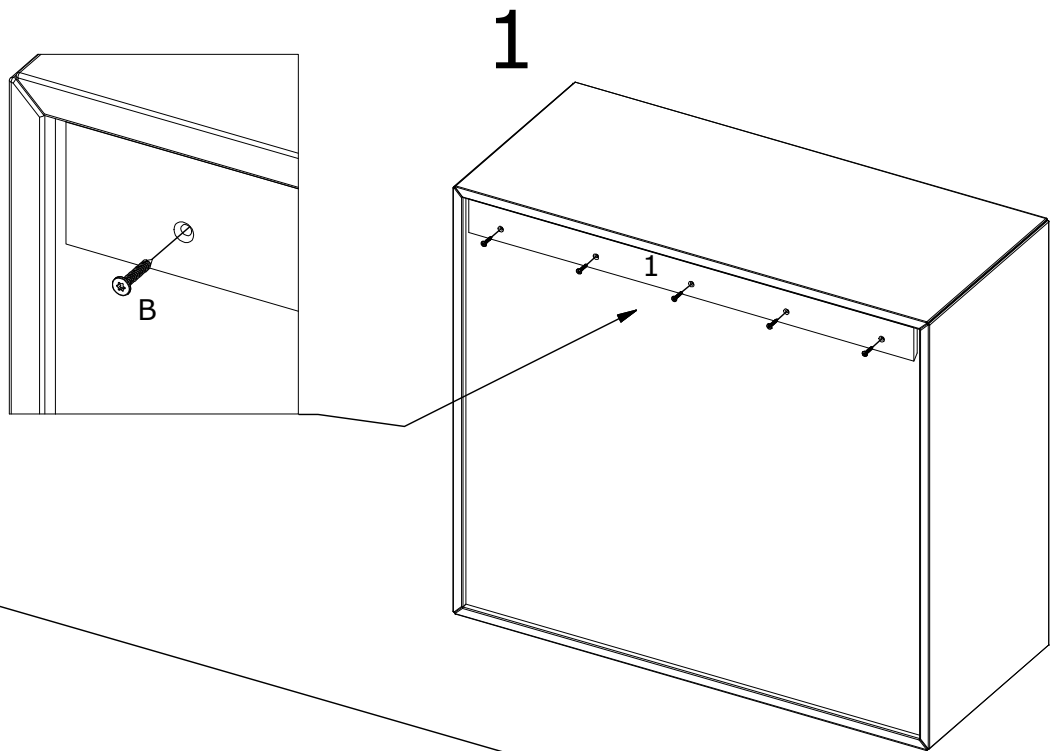

OFFICE DESIGN BY

**DENCON**

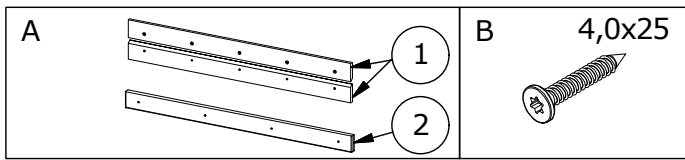

**Advarsel:**  
Anvend passende  
skruer,  
afhængig af  
vægtype.

**Warning:**  
Use screws,  
suitable for  
your walltype.

